

Introduction to PowerPC System Software

Contents

Overview of the PowerPC System Software	1-4
The 68LC040 Emulator	1-6
Emulator Operation	1-7
Emulator Limitations	1-8
Coproductors	1-9
Instruction Timings	1-9
Deleted Instructions	1-9
Unsupported Instruction Features	1-10
Instruction Caches	1-10
Address Error Exceptions	1-10
Bus Error Exceptions	1-11
Memory-Mapped I/O Locations	1-11
Mixed Mode	1-13
Cross-Mode Calls	1-14
Routine Descriptors	1-15
Memory Considerations	1-19
The PowerPC Native Environment	1-19
Fragments	1-20
The Structure of Fragments	1-22
Imports and Exports	1-23
The Table of Contents	1-26
Special Routines	1-29
Fragment Storage	1-30
Executable Resources	1-34
Calling Conventions	1-41
The 680x0 Calling Conventions	1-42
The PowerPC Calling Conventions	1-43

Parameter Passing	1-47
Import Libraries	1-50
The Organization of Memory	1-52
File Mapping	1-53
The System Partition	1-56
Application Partitions	1-57
Data Alignment	1-63
Compatibility and Performance	1-65
Patches	1-66
The Memory Manager	1-68
Performance Tuning	1-70
Mode Switches	1-71
Routine Parameters	1-72